



MISSOURI DEPARTMENT OF HEALTH
STATE PUBLIC HEALTH LABORATORY
DATAMASTER MAINTENANCE REPORT

Complete this report in duplicate at the time of the regular monthly preventive maintenance check, and whenever instrument is repaired. Send copy to Department of Health; retain original in department file.

DATAMASTER SN 950117	MO. State Water Patrol	DATE OF INSPECTION JUN-8 2009
LOCATION OF INSTRUMENT (STREET AND CITY) Benton Co. S.O. 128 W. Washington, Warsaw MO. 65355		TIME OF INSPECTION 11:06

CHECKLIST: Place a check (✓) to the left of each item if found to be satisfactory or if operating within established limits. (Write in observed values where determined.) Unchecked items must be corrected before using instrument.

<input checked="" type="checkbox"/> DIAGNOSTIC CHECK (PRINTOUT ATTACHED)	
<input checked="" type="checkbox"/> COMPUTER	<input checked="" type="checkbox"/> DETECTOR
<input checked="" type="checkbox"/> PROGRAM	<input checked="" type="checkbox"/> FILTERS
<input checked="" type="checkbox"/> HEATERS SAMPLE CHAMBER 49 °C	<input checked="" type="checkbox"/> QUARTZ STANDARD
<input checked="" type="checkbox"/> FLOW DETECTOR	<input checked="" type="checkbox"/> CALIBRATION
<input checked="" type="checkbox"/> PUMP HIGH SPEED	<input checked="" type="checkbox"/> PRINTER
<input checked="" type="checkbox"/> INDICATOR LIGHTS	
<input checked="" type="checkbox"/> TIME AND DATE June 03 11:06	
<input checked="" type="checkbox"/> SIMULATOR TEMPERATURE (34 °C ± 0.2 °C) 34.2 °C	
<input checked="" type="checkbox"/> CALIBRATION CHECK - Run three tests using a standard solution. All three tests must be within ± 5% of the standard value and must have a spread of .005 or less. Check the box corresponding to the standard solution being used. (PRINTOUT ATTACHED) (USE RECIRCULATION PUMP)	
<input checked="" type="checkbox"/> 0.100% STANDARD - MUST READ BETWEEN 0.095% and 0.105% INCLUSIVE <input type="checkbox"/> 0.040% STANDARD - MUST READ BETWEEN 0.038% and 0.042% INCLUSIVE (ONLY ONE STANDARD IS TO BE USED PER MAINTENANCE REPORT)	

TEST 1 <input checked="" type="checkbox"/> .095	TEST 2 <input checked="" type="checkbox"/> .096	TEST 3 <input checked="" type="checkbox"/> .097
--	--	--

<input checked="" type="checkbox"/> PERFORM R.F.I. TEST (PRINTOUT ATTACHED)						
<input checked="" type="checkbox"/> NUMBER OF REFUSALS, SINCE LAST MAINTENANCE REPORT, AND NUMBER OF BREATH TESTS IN EACH RANGE AS FOLLOWS: (DO NOT INCLUDE SIMULATOR TESTS)						
REFUSALS <input type="checkbox"/>	(0-.04) <input type="checkbox"/>	(.05-.09) <input type="checkbox"/>	(.10-.14) <input type="checkbox"/>	(.15-.19) <input type="checkbox"/>	1	(Over .19) <input type="checkbox"/>

List any new parts and describe any alteration or modification that was made to restore the instrument to operate satisfactorily and within established limits (use other side if necessary)

Instrument tested and certified within Dept. of Health
Specifications.

RepCo Marketing Conc. 100% exp. 8-11-09 Lot# 08001

INSPECTING OFFICER	
SIGNATURE 	PRINT NAME Douglas Kissinger
TYPE II PERMIT NUMBER/EXPIRATION DATE 820342 12-30-10	TELEPHONE NUMBER 573-751-3333

CERTIFICATE OF ANALYSIS

MANUFACTURER AND SUPPLIER: RepCo Marketing, Inc.

LOT NUMBER: 08001

EXPIRATION DATE: August 11, 2009 at 11:59 p.m.

RepCo Marketing, Inc. certifies the following:


RepCo Marketing, Inc. manufactured, tested and supplied Lot Number 08001 of Alcohol Certified Solution for simulators. Random samples of said lot number were analyzed utilizing a gas chromatograph and found to contain 0.1216 gms/dl wt/vol ethyl alcohol in aqueous solution (i.e. ethanol).

The alcohol and distilled water used in the solution were found to be free of any interfering substance.

This solution will produce a vapor alcohol value of 0.100% +/-3% when heated to 34 Degrees Celsius +/-0.2 Degrees Celsius in a simulator.

The date of manufacture for this lot number is February 12, 2008.
The expiration date for this lot number is August 11, 2009 at 11:59 p.m.

This document is a true representation of the original Certificate of Analysis.

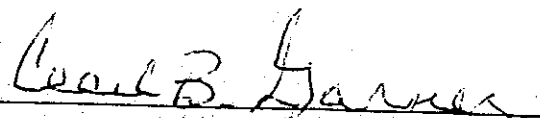

Cecil B. Garner, President
RepCo Marketing, Inc.

Face This Side Down - This Edge In First

BAC DataMaster Evidence Ticket

STATE OF MISSOURI
WATER PATROL

BAC DATAMASTER SERIAL NUMBER 950117
06/03/09

TESTING OFFICER:
KISSINGER/DOUGLAS/C
OFFICER I.D.: 1243
PERMIT NUMBER: 820342
EXPIRATION DATE: 12/30/10
MISCELLANEOUS DATA:

--- SUPERVISOR MODE ---

BLANK TEST	.000	11:17
INTERNAL STANDARD	VERIFIED	11:17
EXTERNAL STANDARD	.095	11:18
BLANK TEST	.000	11:18
EXTERNAL STANDARD	.096	11:19
BLANK TEST	.000	11:19
EXTERNAL STANDARD	.097	11:20
BLANK TEST	.000	11:20

N = 3
SIN = .1
RMS = .006

Operator Signature

Printed on recycled paper with agri-based inks

CMS

Face This Side Down - This Edge In First

BAC DataMaster Evidence Ticket

STATE OF MISSOURI
WATER PATROL

BAC DATAMASTER SERIAL NUMBER 950117
06/03/09

ARREST TIME: 11:00
SUBJECT NAME:
RFI/CHECK
DOB: 01/09/03 SEX: M
STATE/D.L.: MO-12S456679
ARRESTING OFFICER:
KISSINGER/DOUGLAS/C
OFFICER I.D.: 1243
TESTING OFFICER:
KISSINGER/DOUGLAS/C
OFFICER I.D.: 1243
PERMIT NUMBER: 820342
EXPIRATION DATE: 12/30/10
MISCELLANEOUS DATA:

--- INERTIAL ANALYSIS ---

BLANK TEST	.000	11:27
INTERNAL STANDARD	VERIFIED	11:27
RADIO INTERFERENCE		

Operator Signature

Printed on recycled paper with agri-based inks

CMSU 2208-02

Face This Side Down - This Edge In First

BAC DataMaster Evidence Ticket

STATE OF MISSOURI
WATER PATROL

BAC DATAMASTER SERIAL NUMBER S50117
06/03/89
11:06


--- DIAGNOSTIC CHECK ---

COMPUTER:	OKAY
PROGRAM:	OKAY
HEATERS	
SAMPLE CHAMBER:	430
FLOW DETECTOR:	OKAY
PUMP	
HIGH SPEED:	OKAY
DETECTOR:	OKAY
FILTERS:	OKAY
QUARTZ STANDARD:	OKAY
CALIBRATION:	OKAY

PRINTER TEST

!""#%&'()*+,-./0123456789:;<=>?@ABCD EFG
HIJ KLMNOPQRSTU VWXYZ[\]^_`ab cdefghijklmno
pqrstu vwxyz{1}+&

Operator Signature

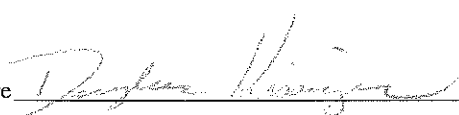

Printed on recycled paper with agri-based inks

CMSU 2208-02

State of Missouri
DEPARTMENT OF HEALTH



P E R M I T
TYPE II



DOUGLAS C. KISSINGER

is hereby authorized to instruct and supervise operators, train instructors, inspect, calibrate, perform field repairs, and operate the following breath analyzer(s):

DATAMASTER

for the determination of the alcoholic content of blood from a sample of expired (alveolar) air. Issued under the provisions of sections 577.020 through 577.041, RSMo 1986.

Date 12/30/2008

Number 820342

Expires 12/30/2010

MO 580-0771 (7-88)

John J Mathewson

Director of State Public Health Laboratory

Director, Department of Health

Lab. 4 (R7-88)